

Installation instructions for 'FREYR' wall cladding elements


STORAGE:

Dry shelter, well ventilated, away from direct sun exposure




TRANSPORTATION:

Horizontally, on evenly distributed supports

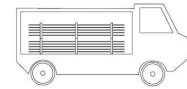

HANDLING:

Unload the products with care

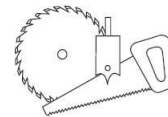


INSTALLATION:

Can be worked with standard wood working tools

VENTILATION:

Typically 25mm (1") from the support surface
Upper and lower ventilation slots to remain open

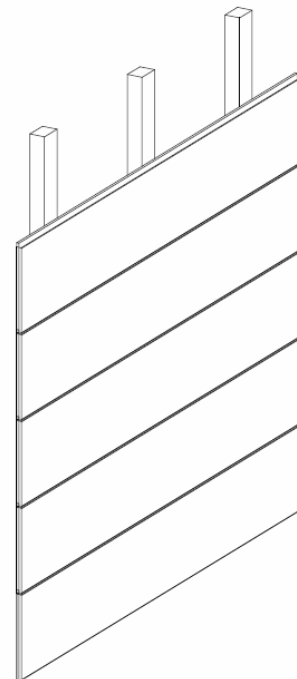


MOUNTING:

End-to-end gap (mm) between boards for an expected surface temperature increase to 60°C			
Board temperature during installation (°C)	Board length		
	2,4 m	3 m	3,6 m
10	4	5	6
15	4	5	6
20	3	4	5
25	3	4	5
30	3	4	4
35	3	4	4

Only use stainless steel fixtures. Tighten screws slightly so that cladding elements can glide freely to compensate for thermal expansion.

Leave gap between first board and obstacle (e.g. wall or window) of 8 mm (5/16").

Spacing between support beams:
leave 35 cm (14") between centres

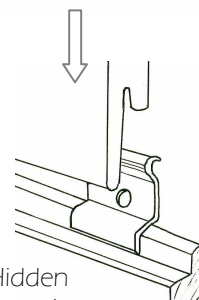

Hidden fastening